


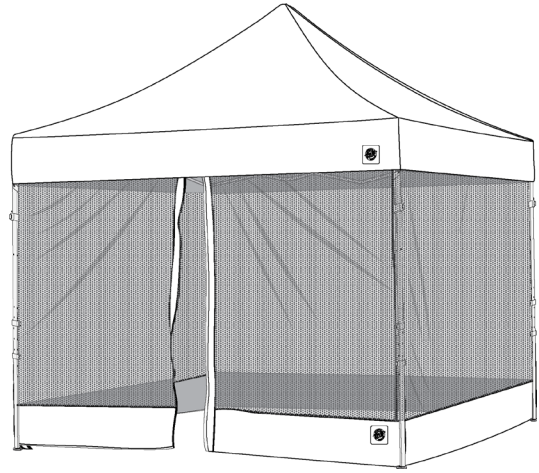


# SCREEN ROOM

## INSTRUCTION SHEET




### SET UP

- 1** Set up your E-Z UP® Canopy. Before starting to hang the screen room, fold the top fabric back halfway at each corner. The screen will wrap around each corner, fitting under the top and against the frame.

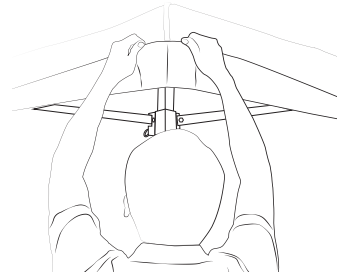


- 2** Begin on the side of the canopy where the desired zippered entrance will be, clip one end of the screen room to the upper truss frame toward the middle of the truss wall. Make sure to align each corner fabric with a shelter leg.

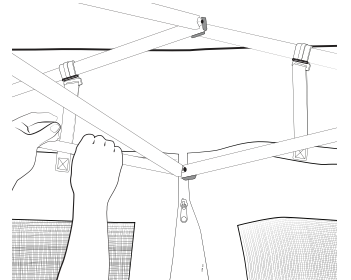


- 3** From the inside, go to the Truss Clip closest to the entrance. Clip screen to top outside truss near corners of the frame and repeat until all four sides of the canopy are covered. Additional elastic bands with V-hooks are also located around each of the frame legs for a secure fit.

Zip screen room wall to fully enclose your canopy from the outside of the screen room wall, pull top down over the wall corners.

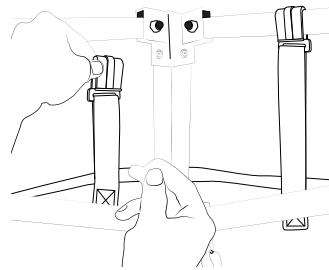


Corner

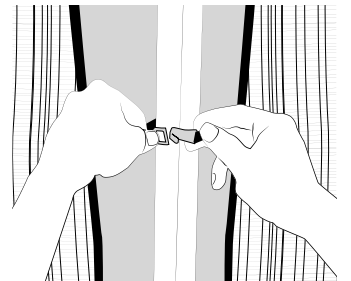



Frame Legs

- 4** Stake down the E-Z UP® Canopy by inserting a stake through the grommet hole in the screen room and through the hole located in the footpad. Push the stake securely into the ground. Repeat on remaining legs and grommet holes of screen room.

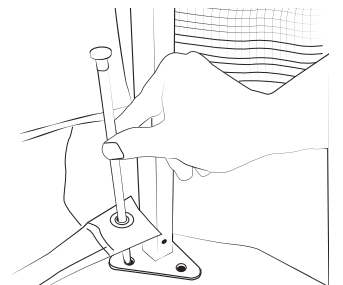

## TAKE DOWN

- 1 Remove all stakes securing screen room and legs.  
From the outside of shelter fold top fabric back from each corner.  
Completely unzip screen room entrance.

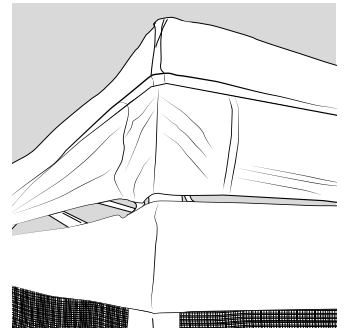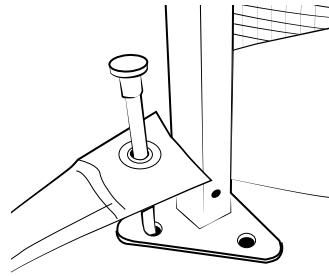

- 2 Unlatch V-hooks from around frame legs. Unhook screen room Truss Clips from trusses and gather screen room walls to store.



## CARE AND MAINTENANCE

For long lasting durability and the best possible protection for your E-Z UP® Pop-Up Display Wall, follow these E-Z care and maintenance instructions:

- Always stake or weight down your E-Z UP® INSTANT SHELTER®. Take down if heavy winds threaten to blow.
- Use a mild soap (not detergent) and plenty of water for cleaning.
- Let the product dry completely before closing or storing to avoid mildew.
- The E-Z UP® INSTANT SHELTER® is designed as a temporary shelter. We do not recommend leaving it up for extended periods of time.
- Do not leave unattended.
- Handle screen room with care. Do not store stakes with screen room.
- Save instructions for future reference.

### REPLACEMENT PARTS

For all shelter sizes: 800-45-SHADE [ezup.com/parts](http://ezup.com/parts)

### WARRANTY INFORMATION

[www.ezup.com/warranties](http://www.ezup.com/warranties)

**CONDITIONS:** This warranty shall be void as to any product that has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to the use of the product that does not conform with the product instructions. This warranty is provided in lieu of all other warranties, expressed or implied.

**WARNING:** Keep all flame and heat sources away from fabrics and accessories. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

**WARNING:** Handle the screen material carefully to avoid rips or tears. Keep fire or lighted objects away.